

Index

AR-07-0690

Index

Control button and jack entries as well as abbreviations such as SMPTE, MIDI and FM are in UPPER CASE.

A

- Access light, 6.2
- Alg ONE or TWO, 4.32-35
- Allocate, 4.3, 4.14, 4.18, 4.22, 4.34
- Allocate Mode, 4.13-15
- Arming tracks, 3.2, 3.5, 3.12
- Audio Event Editor
 - description, 1.8-9
 - panel selection, 1.14-15
 - panels, 1.10-11
 - user buttons, 1.14-15
- Audio recording
 - Allocate Mode, 4.13-15
 - Auto allocate, 4.18-19
 - auto punch in, 4.5-7
 - continuous, 4.4-9
 - crossfades, 4.9
 - cues, 4.10-21
 - displays, 1.8-15
 - documentation, 1.2-3
 - long configuration, 3.6-7
 - manual punch in, 4.4
 - options, 4.2-3
 - recording over a cue, 4.17, 4.20-21
 - rehearsing a take, 4.8
 - Retake, 4.16
 - setting parameters, 3.5
 - sound files from optical disk, 4.26-31
 - sound files from poly memory, 4.22-25
 - synced automatically to picture, 4.18-19
- Auditioning
 - cues in a sequence, 4.29
 - sound files, 4.29
- Auto, 3.2

B

- Backing up cues, 6.6-9
- Backing up to tape
 - projects, 6.3
 - tracks, 6.4
 - verify, 6.5
- Block, 4.15, 4.19
- Bouncing
 - Direct-to-Disk tracks, 4.36-39

C

- Caption and categories
 - editing and locking, 6.8
- Cfade, 4.9
- Change Lock, 4.40
- Continuous recording, 4.2-3
- Control key, 1.8
- Crossfades, 4.9
- Cue
 - backup to optical disk, 6.7-9
 - backup to Winchester, 6.6
 - blocking, 4.15, 4.19
 - caption and category editing, 6.8
 - description, 4.10-11
 - naming, 4.12
 - playback, 5.4-5
 - recalling from Winchester, 6.16
 - recording, 4.2-3, 4.10-21
 - recording over, 4.17

Cue (*con't*)
 recording synced to picture,
 4.18-19
 retake, 4.31
 start and stop times, 4.20
 time scale modification,
 4.32-35
CUE DIR, 1.11
CUE EDIT, 1.11
Cue information, locking, 6.8
Cue Lock, 4.3, 4.17, 4.20, 4.24
CUE STOR, 1.11
CUE TRIM, 1.11
CuePB, 3.2

D

DB (dB), 3.3
Default values
 restoring, 3.18
 saving, 3.17
 setting, 3.16
DIG, 3.3
Digital bounce (see Bouncing)
Direct-to-Disk documentation,
 1.2-3
Direct-to-Disk recording (see
 Audio recording)
Direct-to-Disk tracks
 arming, 3.2, 3.5
 arming from keyboard
 control panel, 3.12
 assignment from keyboard
 control panel, 3.10-11
 backup to tape, 6.4
 bouncing, 4.36-39
 description, 1.4-5
 displaying, 2.10
 erasing, 3.20-21

Direct-to-Disk tracks (*con't*)
 expanded configuration,
 3.8-9
 gain, 3.3
 inputs, 3.3
 locking, 4.40-41
 mode, 3.2
 monitoring, 3.22
 output, 3.4
 pan, 3.4
 playing back, 5.2-3
 protecting, 4.40-41
 recalling from tape, 6.15
 reconfiguring, 3.6-9
 soloing from keyboard
 control panel, 3.13
 status, 3.2
 volume, 3.4

Disk time, 2.6-9

Displays

 audio recording, 1.8-15
 track, 1.8-9

Documentation, Direct-to-Disk,
 1.2-3

E

Erase, 3.6
Erase 1, 3.6
Erase 2, 3.6
Erase All, 2.12, 3.6, 3.8
Erase Proj, 2.12
Erasing Direct-to-Disk tracks,
 3.20-21
EVENTS, 1.11
Expanded track configuration,
 3.8-9

Index (con't)

F G

Gain, 3.3

H I

Input, 3.2

J K

Keyboard control panel
 track arming, 3.12
 track assignment, 3.10-11
 track soloing, 3.13

L

Lock, 4.41
Locked, 2.11
Locking
 captions and categories, 6.8
 projects, 4.40
 tracks, 4.41
Long track configuration, 3.6-7

M

M, 2.11
Main Menu, 1.8-9
Manual, 4.3-4, 4.14, 4.17
Monitoring Direct-to-Disk
 tracks, 3.22
MOTION, 1.11

N

Name
 cue, 4.12
 project, 2.4
 track, 2.10

O

Optical disk, space and time
 available, 6.7
Optical Transfer panel, 4.26-31
OptXfr, 4.26-31
OUT, 3.3
Out, 3.4

P

Pan, 3.4
Panels, Audio Event Editor,
 1.10-11, 1.14-15
PolyXfer, 4.3, 4.22-25
Project
 backup to tape, 6.2-3
 create, 2.4-11, 3.19
 current, 1.6
 default values, 3.16-19
 description, 1.4-7
 End time, 2.5
 erasing, 2.12
 locking, 4.40
 modify settings, 2.11
 name, 2.4
 parameter entry, 2.8-9
 protecting, 4.40
 recalling from tape, 6.10-14
 recalling different track
 configurations, 6.12-14

Project (*con't*)

- sampling rate, 2.4
- selecting, 2.2-3
- Start time, 2.5
- status, 2.11

Project Directory

- backup to tape, 6.2-5
- description, 1.8-9
- reconfiguring tracks, 3.6-9

Project Manager

- description, 2.2-3
- modes, 1.12-13
- parameter settings, 2.4-9
- tracks displayed, 2.10

Project time, 2.6-9

PROJECTS, 1.11

Protecting

- projects, 4.40
- tracks, 4.41

Punch In, 4.3-4, 4.6, 4.8

Q R

Ready, 3.2

Recalling

- cues, 6.16
- cues from optical disk, 4.26-31
- projects, 6.10-14
- projects from other systems, 6.11
- tracks, 6.15

Reconfiguring tracks, 3.6

RECORD, 1.11

Recording, Direct-to-Disk (see Audio recording)

REHEARSE, 4.8

Repro, 3.2

Retake, 4.16, 4.31

S

Safe, 3.2

Sampling rate, 2.4

Select Project, 3.2

Sequencer, 4.3, 4.6, 4.8, 4.18, 4.20

Sequencer Motion Control panel, 1.11, 5.2-3

Show All, 1.12-13

Show Project, 1.12-13

Size, 2.10

Skip, 6.10-11, 6.13, 6.15

Skip All, 6.3

Sound files

- audio recording, 4.22-31
- auditioning, 4.29
- caption and category editing, 6.8
- information, 4.28
- recording over a cue, 4.24-25
- transfer to Direct-to-Disk, 4.22-31

Status

- messages, 2.11
- project, 2.11

STM, 3.3

SYNC, 1.11

Synchronization, 3.14-15

T

Tab, 1.8

Tape storage

- backing up projects, 6.3
- backing up tracks, 6.4
- recalling projects, 6.10-14
- recalling tracks, 6.15
- status light, 6.2
- WangDAT tape drive, 6.2

Index (con't)

Time displays, 2.6-9
Time scale modification (TSM),
 4.3, 4.32-35
Trig Start/Stop, 4.5, 4.13
Trigger (Trig) switch, 4.2-3
Track Display, 1.8-9
Tracks, Direct-to-Disk (see
 Direct-to-Disk tracks)
Trig Start/Stop, 4.5, 4.13
TRK, 3.3
Trk Start/Stop, 4.5
TSM (see Time scale
 modification)

U

Unlock, 2.11, 4.41
User buttons, Audio Event
 Editor, 1.14-15

V

Verify tape backup, 6.5
Volume, 3.4

W X Y Z

Winchester drives
 backing up cues, 6.6
 recalling cues, 6.16